

CM8300C and CM830R constant monitor

The In-Line wrist strap, mat and Earth Constant Monitor is designed to continuously monitor whether the wrist strap, bench mat or the Earth is disconnected whilst simultaneously checking the Earth to ground system is working correctly.

Should any part of the ESD system fail a red LED indicator will illuminate and a buzzer sound. That part of the system should be checked using the appropriate test equipment before continuing with manufacture.

Common Features of the CM8300C and CM8300R

Constant monitoring of the Earth to ground connection.

Constant monitoring of the work mat to Earth connection.

Constant monitoring of the wrist strap connection.

Features of the CM8300C

 
Wrist strap body mass adjustment for individual user set up.

Features of the CM8300R


Automatically enters standby mode when wrist strap cord is removed.

Indicates 'high' or 'low' fail for the users wrist strap.

Installing your constant monitor

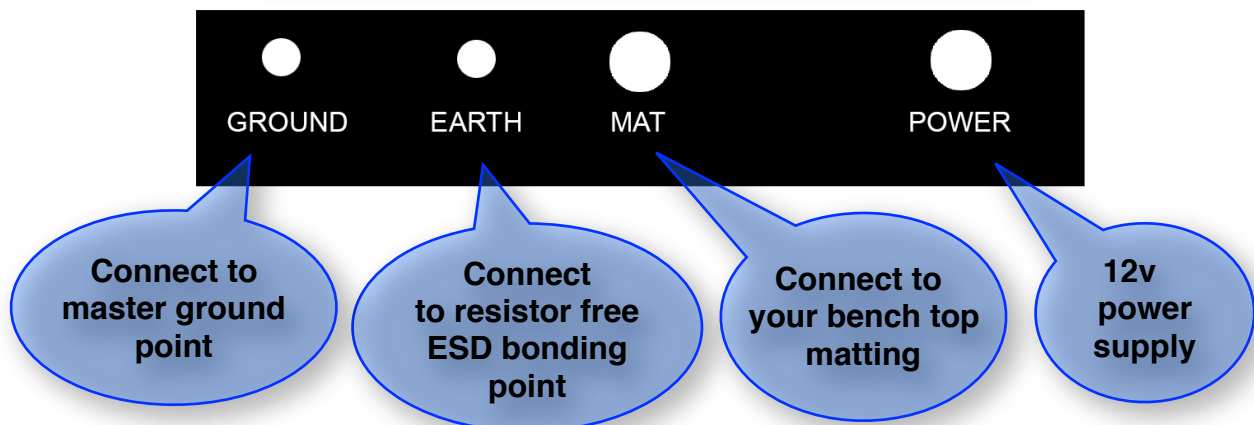

 The supplied connection kit allows you multiple ways to install your constant monitor.

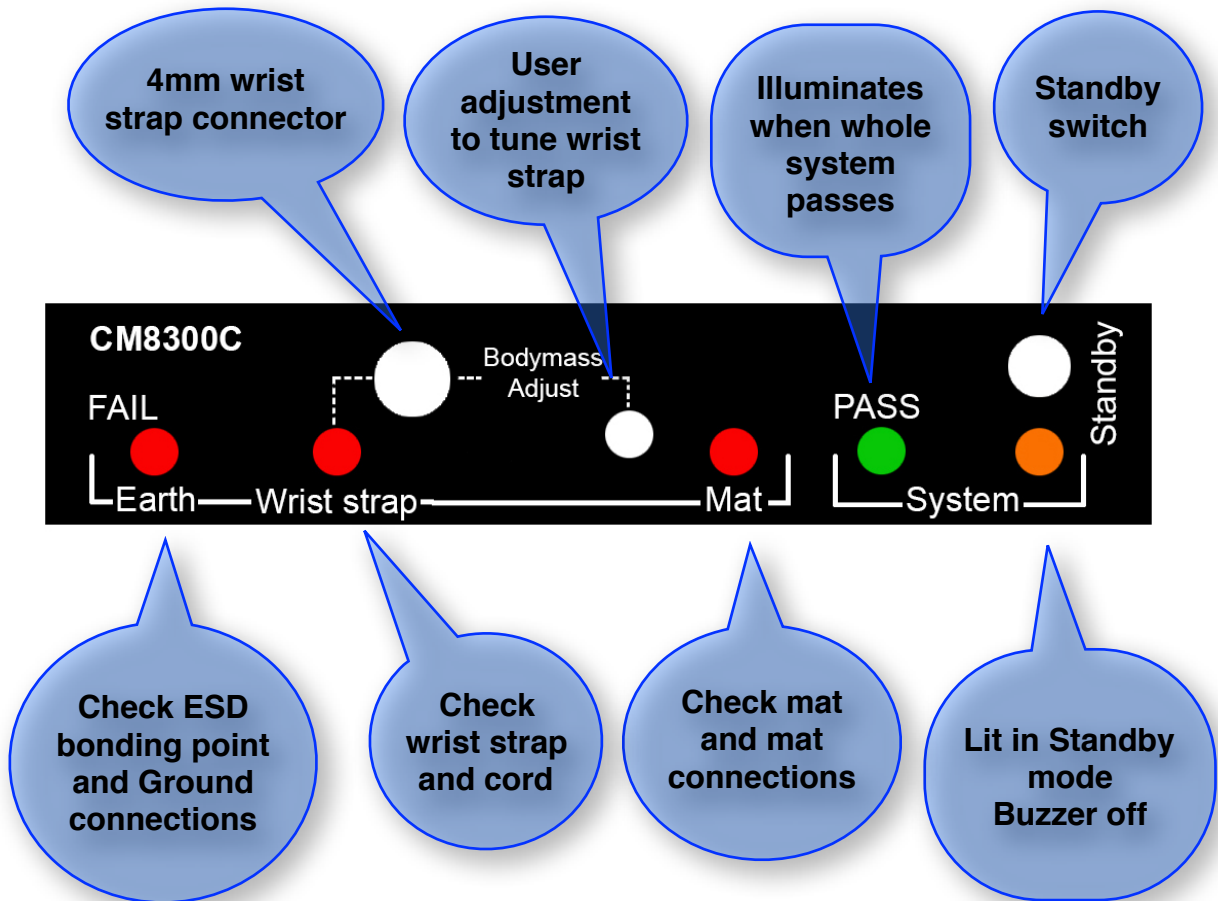

Using your constant monitor

