

## **Instruction Manual**

# Self-Cleaning Low Maintenance Ioniser

(KS2451)



Registered at Cardiff No. 2933918
Registered Office: Bondline Electronics, Unit 4,
Rivermead Industrial Estate, Rivermead Drive,
Swindon, Wiltshire, SN5 7EX



#### Introduction

Thank you for purchasing a Self-Cleaning Low Maintenance Ioniser. Please read this instruction manual in great detail before operating the device. Keep this manual readily accessible for later reference.


#### Description

The KS2451Self-Cleaning Low Maintenance Ioniser is designed to be used on bench tops for static elimination. It is compact in size, measuring 180 x 72 x 201mm. The ioniser has an exquisite and sleek design. The ioniser is safe and reliable with stable performance and the fan has step-less speed regulation. It has a standard tungsten alloy needle which offers longer lifetime compared to titanium and silicon materials. The KS2451 is CE certified ensuring a high-security and high-reliability static eliminator. The ioniser features an automatic needle brushing function. By default, the needle is automatically brushed every 8 hours for manual cleaning and maintenance free. Supplied with UK plug as standard.

Properties	Value	
Input Voltage	15V	
Power	9W	
Working Voltage	±DC4000-DC7000V	
Ion Emission	Steady-state DC	
Emitter Electrode	Tungsten Alloy	
Discharge Structure	Uncoupled electrical contact (discharge cylinder)	
Discharge Range	750 x 300mm (LxW)	
Discharge Speed	≤2.0s (300mm away from the air outlet)	
Ion Balance	≤ ±10V  (300mm away from the air outlet)	
Alarm Indicator	The power indicator light on indicates working normally	
Air Volume	≤89.1CFM	
Noise	≤43db (1m away from the air outlet)	
Ozone Thickness	≤0.05ppm (150mm away from the air outlet)	
Working Temperature	0-50°C	
Working Humidity	30-70%RH	
Dimensions	140 x 55 x 185mm (LxWxH) (Blower body size)	
Packaging Accessories	1 pair of U-shaped aluminium spray powder mounting bracket, 1 pair of bakelite screw handles (M6×12)	
Shell Material	Aluminum powder spray	
Power Adapter	INPUT: 100-240V 50/60Hz; OUTPUT: DC15V 1000mA	
Net Weight	1500g (Including 1 external power adapter)	
Gross Weight	1980g	
Warranty	1 Year	
Certification	CE	



Discharge Effect	Value	
Test Standard	ANSI/ESD.STM3.1,SJ/T 11446—2013	
Test Instrument	Trek 157 static tester	
Test Voltage	±1000V → ±100V attenuation	
Test Environment	Humidity 50±5%; Temperature 23±3°C	

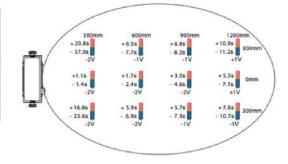


The test data as follows (test distance: 450mm in front, maximum air volume):




#### **Working Way**

The ionising air blower adopts the synchronous emission technology of positive and negative ions, which use two sets of independent emitter electrodes to generate a direct current corona discharge to produce a large number of positive and negative air ions, which are blown by the axial fan to the surface of objects with electrostatic to be eliminated.

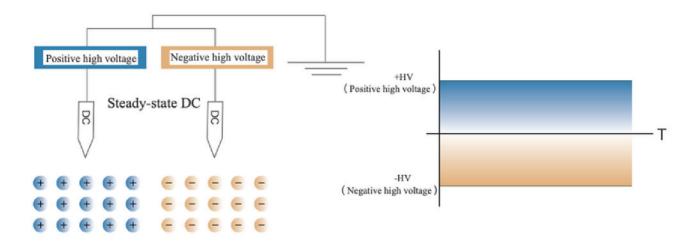




#### **Product Details**

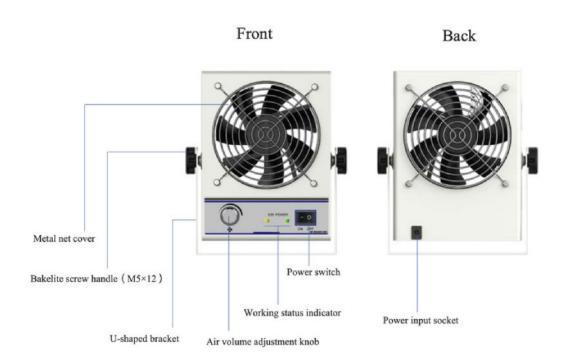


#### **Product Dimensions**

**Note:** The outside drawing may change slightly due to improvement. They should comply with the real device.


Unit: mm

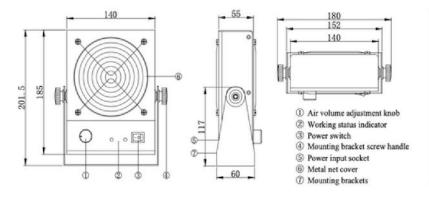

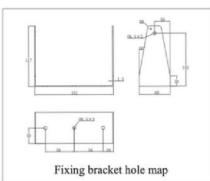




#### **Steps Of Use**

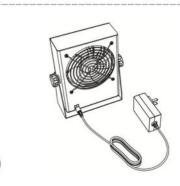


Take out the power adapter from the packing box and connect the ionising air blower. Place the ionising air blower close to the working area (about 300~750mm away from the object with electrostatic to be eliminated), and the air outlet of the ionising air blower must be vertically aligned with the object to be eliminated.

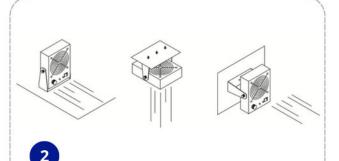


Use screws or bolts to fix on a firm and flat surface (such as a wall or shelf). The angle of ionising air blower can be adjusted by the knobs on both sides of the bracket to achieve the best static elimination effect.

#### **Installation Position**


**1.** Place the ionising air blower in the working area where static electricity is to be eliminated. And the installation angle should be perpendicular to the surface of the charged body and about 300 to 750mm away from the static electricity object.



- **2.** Ionising air blower should be at least 30cm away from the metal conductor and metal grounding body.
- **3.** Two ionising air blowers should be installed side by side with an interval of more than 400mm and more than 200mm away from obstacles such as walls.

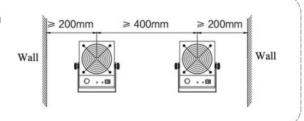

4. The air inlet is at least 150mm away from the wall.





#### **Packing Accessories**

Part Name	Picture	Specification
Switching power adapter (national standard plug)	60	DSS28-1502000-A 100-240V 1.0A 50/60HZ DC15V-2.0A wire length 2m

#### Safety Warning 🗥



- 1. Read the operating instruction carefully before installing and using the device.
- 2. The whole equipment must be reliably grounded during use.
- 3. Do not use the device when the humidity is higher than 70%.
- **4.** Do not use the device in inflammable and explosive environment.
- 5. It is strictly forbidden to disassemble products without authorization. Internal maintenance and repair must be carried out by professional personnel.
- 6. The product is strictly prohibited to touch liquid during use, otherwise there will be abnormal, resulting in electric shock or fire.
- 7. Power must be turned off during inspecting or replacing the product, otherwise it may cause electric shock or fire.
- 8. The product is specially designed for removing static electricity and is strictly prohibited for other purposes. Any abnormal use may cause machine failure, electric shock, fire and other hidden dangers.
- 9. It is strictly forbidden to touch the electrode needles when power is on, otherwise it is easy to cause fault and electric shock accident.
- **10.** Discharge needle is a sharp metal object, please use it with care.
- **11.** Please check the specifications of the power supply before powering on the product. Any power supply that does not meet the specifications may cause damage or even failure to the product.
- 12. Check the power cord and communication line regularly. If it is damaged, replace it immediately; otherwise, leakage, poor communication and abnormal operation may occur.



### **Trouble Shooting**

No.	Problems	Reasons	Solutions
1	The indicator on the fan panel is off	Poor contact of the power cable	Check whether the power cable is in good condition and securely connected
		Power supply mismatch	Confirm the power supply specification(INPUT:100— 240VAC 50/60Hz;OUTPUT:15VDC 2000mA)
2	The electrostatic removal	Discharge needle is polluted and damaged	Clean or replace the discharge needle
2	performance is obviously reduced	Bearing set of ionising air blower is improper	Confirm the best bearing set
3	The electrostatic removal performance is reduced	There are conductors or other ionising air blowers around	Remove (moving) conductors or other ionising air blowers
4	Unable to discharge	High voltage module is damaged	Return to factory for maintenance
		Main-board chip is damaged	Return to factory for maintenance
5	The product is smoky or burnt	The main control board components are burnt out	Return to factory for maintenance



#### Maintenance

1) The ionising air blower should be cleaned and maintained in time according to the use environment and the required electrostatic protection requirements in order to ensure the good performance of the product. That is, gently remove the carbon deposits on the discharge electrode and metal net cover with electrostatic brush, dust-free cotton swab, dust-free cloth dipped in anhydrous alcohol.

#### Note:

- A. Operation must be done 10 minutes after power cut off.
- **B.** It must be cleaned when dust or white stuff appear on the tip of the needle during use.
- **C.** The ionising air blower must be powered on after alcohol is completely volatilized after cleaning. No other organic solvent can be used to clean the ionizing air blower.
- **D.** The alloy electrode is a consumable product which is not included in the scope of warranty and will be charged for replacement when repairing.
- 2) Do not press or rotate the control buttons on the fan panel too hard; otherwise, the device will be permanently damaged.
- **3)** If the working indicator light on the front panel of the fan is off or red, it should be stopped and repaired by professional maintenance personnel. It can be used only after the electrical performance index is normal.

#### **After-Sales Service**

- **1)** KS2451 self-cleaning low maintenance ioniser has undergone rigorous testing and ageing treatment before ex-work. Its performance has completely reached the relevant indicators marked in the usage instruction.
- **2)** Bondline makes a commitment to the customer that any defective parts inspected by Bondline will be repaired or replaced free of charge within one year from the date of purchase. However, this commitment does not apply to: The device is incorrectly used or installed; Damage caused by negligence or accident during use; Modified, disassembled or repaired by other service departments not authorised by Bondline Electronics Ltd.
- **3)** Bondline shall not be liable for any incorrect use of the products except for repair or replacement of parts as specified above.