



Self-Cleaning Suspended 4-Fan Ioniser



**Next Day
UK Delivery**



**Dedicated
Account Manager**




**Free Shipping
Over £100***

Self-Cleaning Suspended 4-Fan Ioniser

KS2454

Description

The KS2454 self-cleaning suspended 4-fan ioniser adopts DC working method and features a multi-unit independent ion transmitter combination, fan step-less speed regulation. The 4-fan ioniser is suitable for static removal in a large area, measuring 1000 x 55 x 150mm (LxWxH) in size. It features a standard tungsten alloy needle which offers longer lifetime compared to titanium and silicon materials. The ioniser effectively solves the problems caused by static electricity: static removal, prevent adhesion of objects, prevent material splash, prevent static electricity and prevent blockage of feeder. Supplied with UK plug as standard, EU plug available on request.

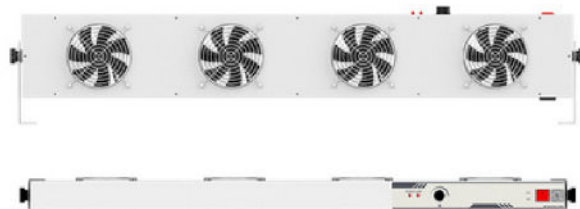

1000 x 55 x 150mm (LxWxH)

Key Features

- Suitable for static removal in a large area
- Multi-unit independent ion transmitter combination
- Fan has a step-less speed regulation and long service life
- Front and rear mesh covers are removable
- Speed of electrostatic elimination is fast
- Automatic brushing pins at start-up
- Automatically brushes the needle every 24 hours
- Standard tungsten alloy needle for longer service life
- Supplied with UK plug as standard (EU plug on request)
- Supplied with instruction manual
- Good circuit stability
- CE certification

Effectively solve the problems caused by static electricity



Prevent blockage of feeder



Prevent material splash



Prevent adhesion of objects



Prevent static electricity



Static removal

Self-Cleaning Suspended 4-Fan Ioniser


KS2454

Properties	Value
Input Voltage	AC220V/50Hz or 110V/60Hz
Working Voltage	±DC4000-DC7000V
Power	25W
Ion Emission	Steady-state DC
Emitter Electrode	Tungsten Alloy
Discharge Structure	Uncoupled electrical contact (discharge cylinder)
Discharge Range	1020 x 300 x 750mm (LxWxH)
Discharge Speed	≤3s (450mm vertical from the center of the air outlet)
Ion Balance	≤ ±10V (450mm vertical from the center of the air outlet)
Alarm indicator	The power indicator light on indicates working normally
Air Volume	≤4*89.1CFM
Audio Noise	≤ 65db (150mm away from the air outlet)
Ozone Thickness	≤0.05ppm (150mm from the air outlet)
Operating Temperature	0-50°C
Operating Humidity	30-70%RH
Dimensions	1000 x 175 x 53.5mm (LxWxH) (Fan body size)
Packaging Accessories	1 pair of L-shaped aluminium spray powder mounting bracket, 1 pair of bakelite screw handles (M6×12)
Shell Material	Aluminum powder spray
Net Weight	3100g (Including power cord, bracket accessories, etc.)
Gross Weight	5150g
Warranty	1 Year
Certification	CE

Self-Cleaning Suspended 4-Fan Ioniser

KS2454

Discharge Effect	Value
Test Standard	ANSI/ESD.STM3.1, SJ/T 11446—2013
Test Instrument	Trek 157 static tester
Test Voltage	$\pm 1000V \rightarrow \pm 100V$ attenuation
Test Environment	Humidity $50 \pm 5\%$; Temperature $23 \pm 3^\circ C$

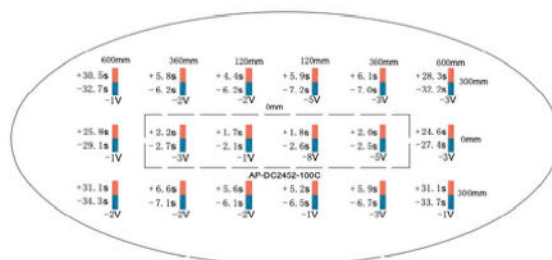


The test data as follows (test distance: 450mm in front, maximum air volume):



Working Way


The KS2454 ioniser uses positive and negative synchronous emission electrodes to generate corona discharge through DC high voltage, ionize air molecules and generate a large number of positive and negative air ions, which are blown to the surface of the object with electrostatic to be eliminated by the fan.

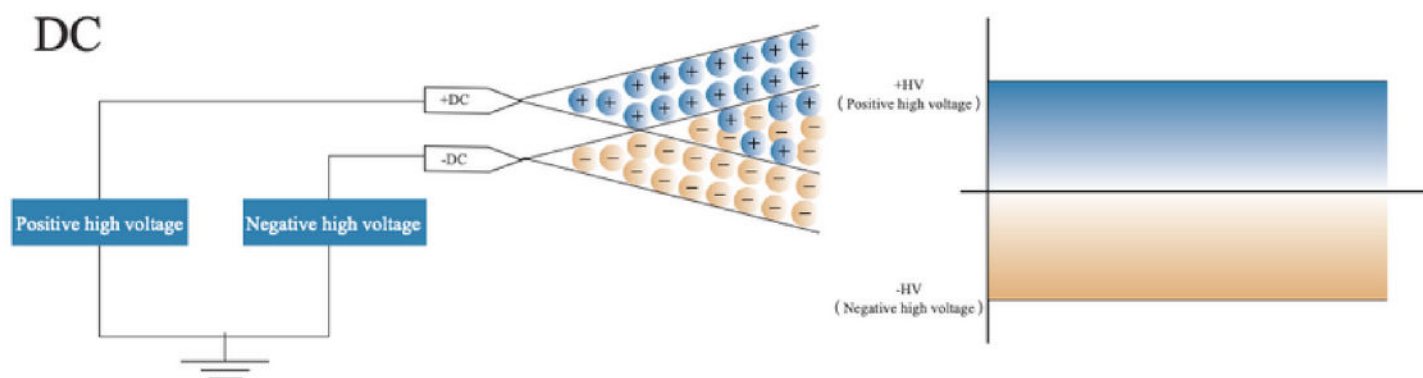

Self-Cleaning Suspended 4-Fan Ioniser


KS2454

Product Details

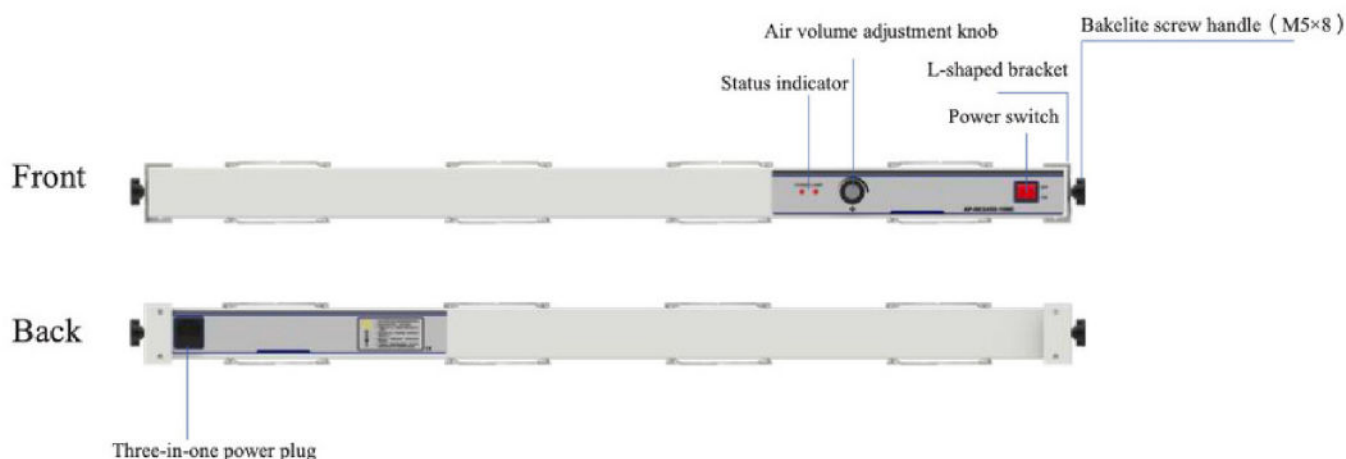

Product Size

Unit: mm

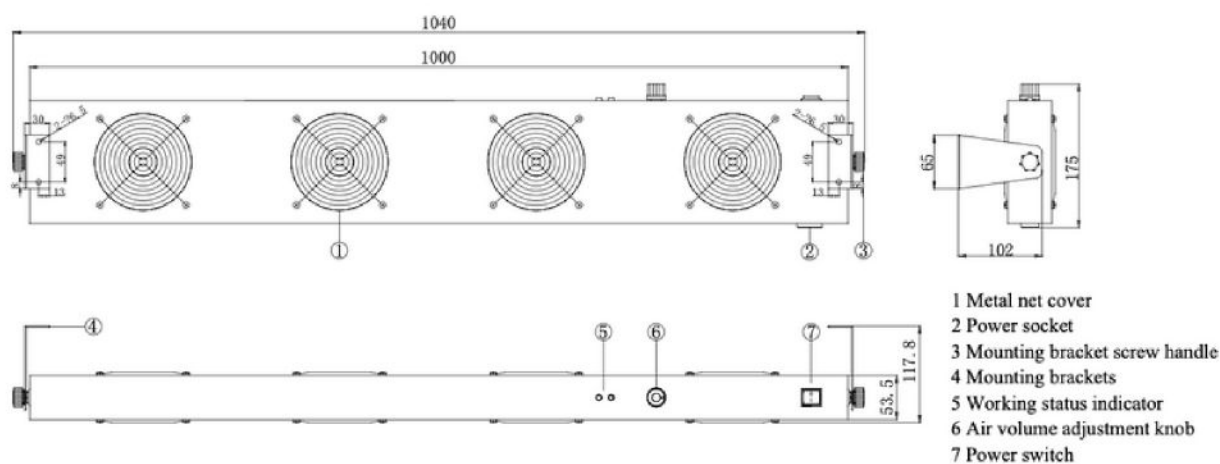

Self-Cleaning Suspended 4-Fan Ioniser

KS2454

Packing Accessories

Part Name	Picture	Specification
National standard power cord		Standard 1.8m, optional 3m/5m

Safety Warning

1. Read the operating instruction carefully before installing and using the device.
2. The whole equipment must be reliably grounded during use.
3. Do not use the device when the humidity is higher than 70%.
4. Do not use the device in inflammable and explosive environment.
5. It is strictly forbidden to disassemble products without authorization. Internal maintenance and repair must be carried out by professional personnel.
6. The product is strictly prohibited to touch liquid during use, otherwise there will be abnormal, resulting in electric shock or fire.
7. Power must be turned off during inspecting or replacing the product, otherwise it may cause electric shock or fire.
8. The product is specially designed for removing static electricity and is strictly prohibited for other purposes. Any abnormal use may cause machine failure, electric shock, fire and other hidden dangers.
9. It is strictly forbidden to touch the electrode needles when power is on, otherwise it is easy to cause fault and electric shock accident.
10. Discharge needle is a sharp metal object, please use it with care.
11. Please check the specifications of the power supply before powering on the product. Any power supply that does not meet the specifications may cause damage or even failure to the product.
12. Check the power cord and communication line regularly. If it is damaged, replace it immediately; otherwise, leakage, poor communication and abnormal operation may occur.

Self-Cleaning Suspended 4-Fan Ioniser

KS2454

Trouble Shooting

No.	Problems	Reasons	Solutions
1	The indicator on the fan panel is off	Poor contact of the power cable Power supply voltage mismatch	Check whether the power cable is in good condition and securely connected INPUT:220VAC 50Hz
2	The electrostatic removal performance is obviously reduced	Discharge needle is polluted and damaged Bearing set of ionising air blower is improper	Clean or replace the discharge needle Confirm the best bearing set
3	The electrostatic removal performance is reduced	There are conductors or other ionising air blowers around	Remove (moving) conductors or other ionising air blowers
4	Unable to discharge	High voltage module is damaged Main-board chip is damaged	Return to factory for maintenance Return to factory for maintenance
5	The product is smoky or burnt	The main control board components are burnt out	Return to factory for maintenance

Self-Cleaning Suspended 4-Fan Ioniser

KS2454

Maintenance

1) The ionising air blower should be cleaned and maintained in time according to the use environment and the required electrostatic protection requirements in order to ensure the good performance of the product. That is, gently remove the carbon deposits on the discharge electrode and metal net cover with electrostatic brush, dust-free cotton swab, dust-free cloth dipped in anhydrous alcohol.

Note:

A. Operation must be done 10 minutes after power cut off.

B. It must be cleaned when dust or white stuff appear on the tip of the needle during use.

C. The ionising air blower must be powered on after alcohol is completely volatilized after cleaning. No other organic solvent can be used to clean the ionizing air blower.

D. The alloy electrode is a consumable product which is not included in the scope of warranty and will be charged for replacement when repairing.

2) Do not press or rotate the control buttons on the fan panel too hard; otherwise, the device will be permanently damaged.

3) If the working indicator light on the front panel of the fan is off or red, it should be stopped and repaired by professional maintenance personnel. It can be used only after the electrical performance index is normal.

After-Sales Service

1) KS2454 self-cleaning suspended 4-fan ioniser has undergone rigorous testing and ageing treatment before ex-work. Its performance has completely reached the relevant indicators marked in the usage instruction.

2) Bondline makes a commitment to the customer that any defective parts inspected by Bondline will be repaired or replaced free of charge within one year from the date of purchase. However, this commitment does not apply to: The device is incorrectly used or installed; Damage caused by negligence or accident during use; Modified, disassembled or repaired by other service departments not authorised by Anping Company.

3) Bondline shall not be liable for any incorrect use of the products except for repair or replacement of parts as specified above.



Eliminate Costly Static Damage...

Whether you are experiencing unacceptable levels of damage in transit, need a specific cleanroom solution or simply don't know which ESD safe equipment is best for you, we can help!

Request complimentary, no obligation advice by speaking with one of our technical experts today.

